

Frontansicht






Seitenansicht

HTA 811-...  
HTS 811-...  
BTS 850-...  
IQ HTA/HTS/BTS

HTC 811-...  
BTC 850-...

HTSV 811-...  
BTSV 850-...

 AHT 870-...  
AHTV 870-...  
HTCV 811-...  
BTCV 850-...


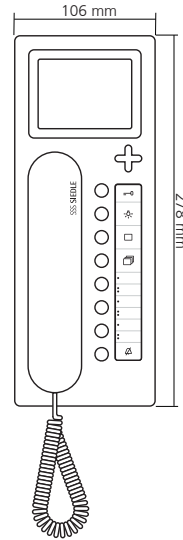
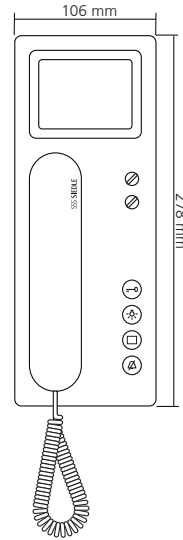
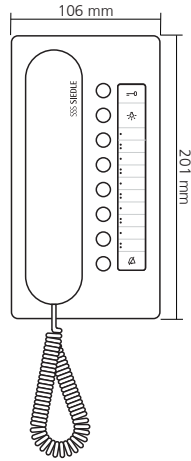
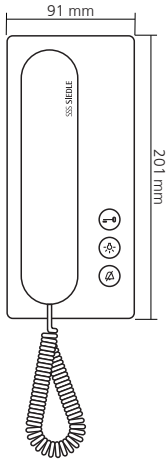


AFS 870-...  
BFS 850-...

BFC 850-...




AFSV 870-...  
BFSV 850-...

 AHF 870-...  
AHFV 870-...  
BFCV 850-...

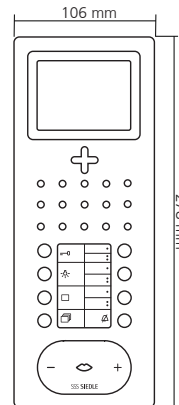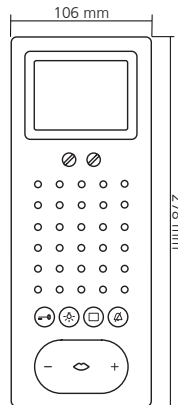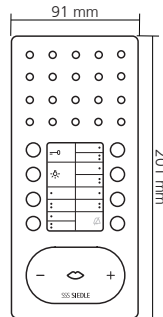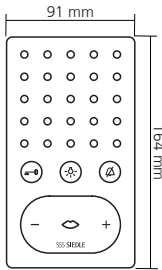

AIB 150-...

 VIB 150-...

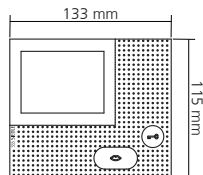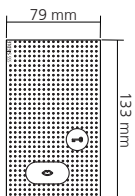

Service

Kundenservice im Werk Furtwangen  
+49 7723 63-375  
support@siedle.de