

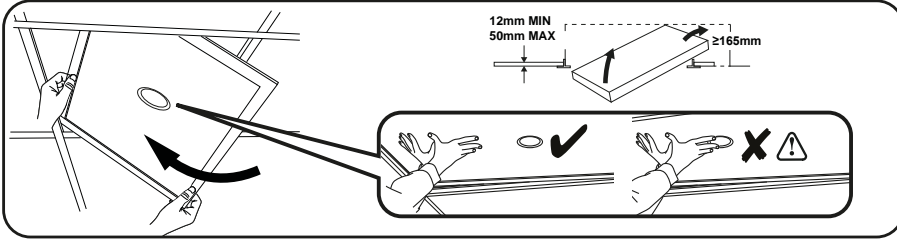
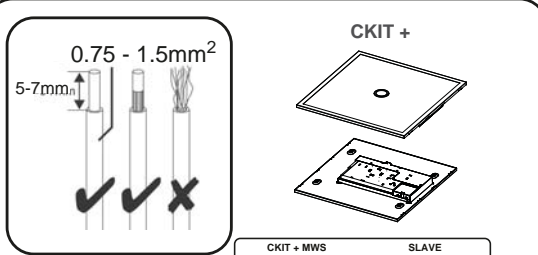



7 600/625

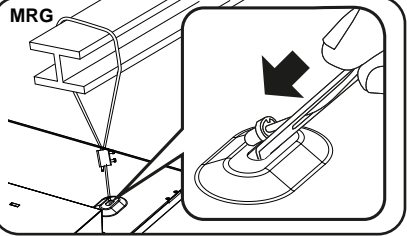



3x12/3x12D

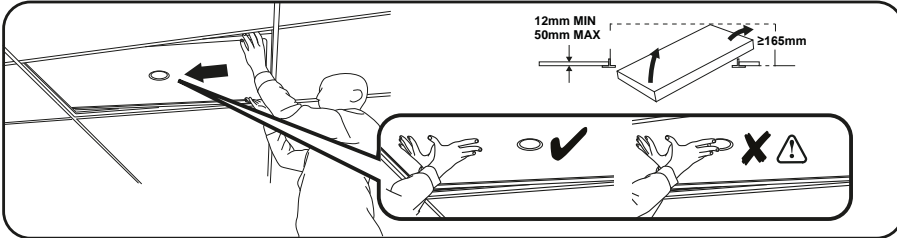


REMOTE DRIVER

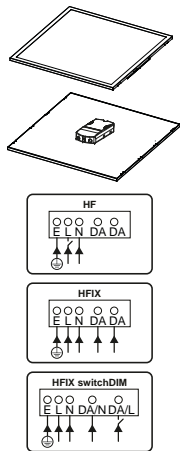

CKIT

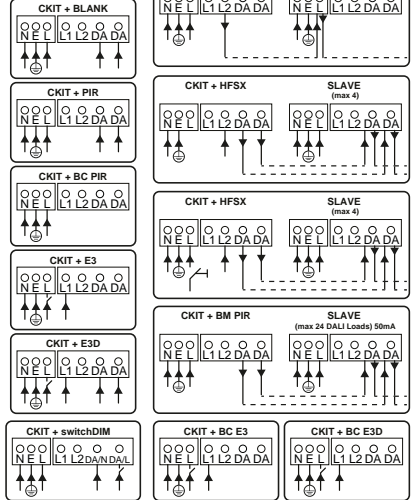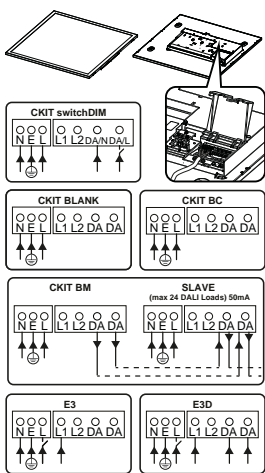

THORN

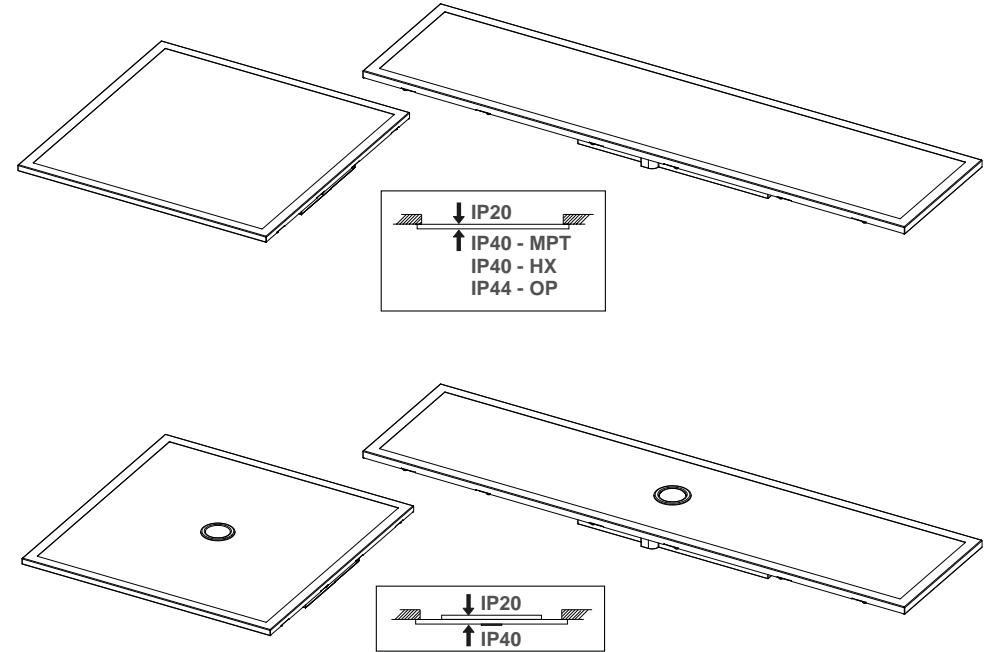


Omega Pro2 600x600 & 625x625 Omega Pro2 300x1200 & 312x1250



- [CZ] Montážní návod
- [DE] Montageanleitung
- [DK] Monteringsvejledning
- [EE] Paigaldusjuhend
- [FI] Asennusohje
- [FR] Notice de montage
- [HU] Szerelési útmutató
- [IT] Istruzioni di montaggio

- [LT] Montavimo Instrukcijos
- [LV] Instalācijas instrukcija
- [NO] Monteringsanvisning
- [PL] Instrukcja montażu
- [RU] Инструкция по монтажу
- [SE] Installationsanvisning
- [UK] Installation Instructions

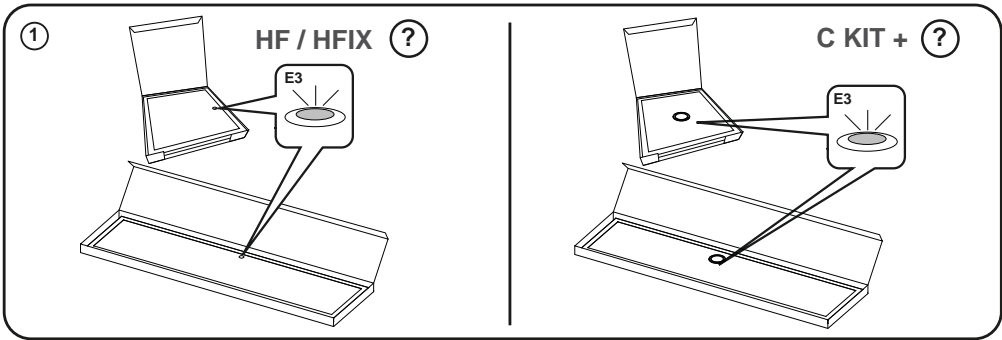


2

E3/E3D ? → 3

? → 7

	Q600 96633189	Q600 96633197
	Q625 96633190	Q625 96633197
	3x12 96633191	3x12 96633197
	3x12D 96633192	3x12D 96633197

	Q600 96633271	Q600/Q625 96633198	Q600 96633193
	Q625 96633271	3x12/3x12D 96633300	Q625 96633194
	3x12 96633271	Armstrong	3x12 96633195
	3x12D 96633271	SAS	3x12D 96633196
		Burgess 96404232	

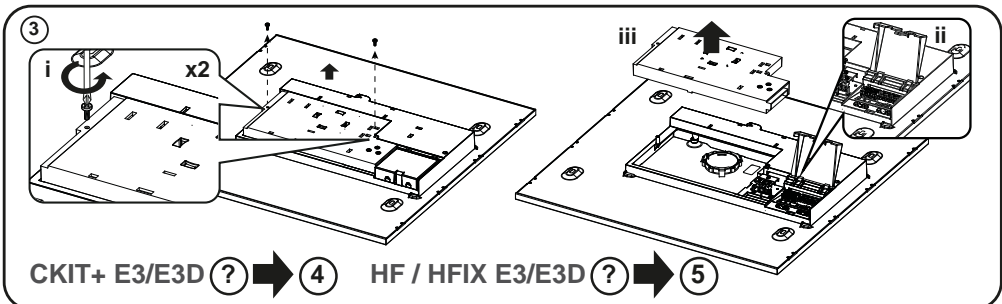


4

E3/E3D ?

iv **v** **vi**

vii **viii**

6

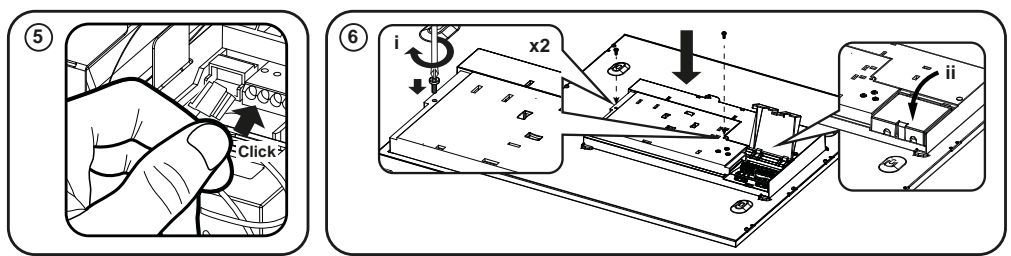

C KIT + E3 / E3D

HF / HFIX + E3 / E3D

< 3h **x**
59010611 – LiFePO4 Lithium Iron Battery

< 3h **x**
59010274 – LiFePO4 Lithium Iron Battery